

## SUBARU IMPREZA GDB – DISABLING CLUTCH ORIFICE

CLUTCH ORIFICE mechanism has been installed as original function in a Subaru Impreza GDB to prevent rapid clutch engagement.

However, this function may accelerate the wear rate of the carbon disc or induce slipping of the clutch, we recommend to disable the function by completing the following steps:

1. Please detach the clutch orifice, which located next to clutch operating cylinder.
2. Loosen the screw on the orifice on the operating cylinder side. **\*Please note that there are springs inside of the orifice\***
3. Remove the 2 springs as well as 2 plastic pieces from the orifice.
4. Please make sure the washer is attached to the screw and begin to tighten up the screw in order to prevent any clutch fluid from leaking.
5. Attach the orifice to the vehicle as before and bleed the clutch of air to ensure the clutch functions properly.

